

American DJ®

User Instructions

mini-saucer™

HALOGEN LAMP WARNING!

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move fixture until lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.

Caution! Always disconnect from main power before replacing lamps or servicing unit. Remember to always replace with same lamps and fuses.

Model: mini-saucer

SPECIFICATIONS:

Lamp: 1 x ZB-64514 120V 300W,

Dimensions: 25" x 15.5" x 12"

Weight: 12 lbs.


Supply Voltage: 120V

Fuse: 5A

Working Position: Any Safe position

Duty Cycle: 10 min., on, 10 min. off

Colors: Multiple Colored Lens.

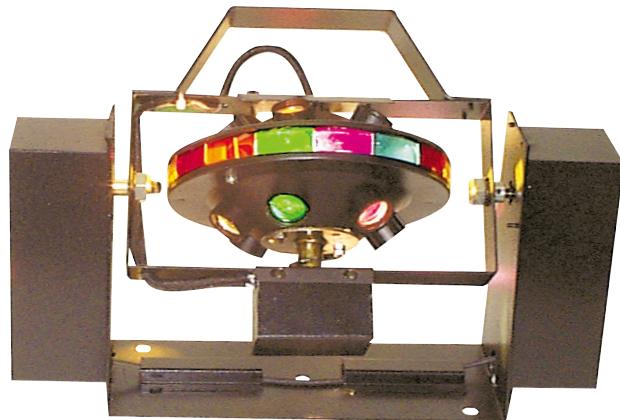

Thank you for purchasing American DJ® product. For your convenience this lighting effect has been lamped and is ready to be used, there is no assembly required. Please read the following instructions before installing or using your new unit.

Product Description:

Dual action Rotating head and tumbling effect.

Operating Instructions:

Unit is ready to be hung or set on flat surface. Be sure not to obstruct cooling vent. Place in a well ventilated area. For best results, fog or special effects smoke must be used in order to see the beams of light.

Caution! Never open unit when in use. Always disconnect main power before servicing or replacing lamp. Remember always replace same type lamp and fuse.

Lamp replacement: Remove thumb screws of unit and pull out lamp from socket . Remove and replace lamps. When replacing lamp it helps to wiggle side to side slightly while pushing in.

For service, contact your American DJ® dealer.

American DJ® LOS ANGELES, CA. 90058 USA